

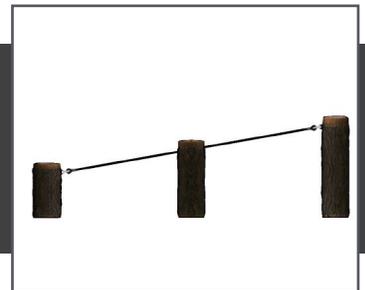
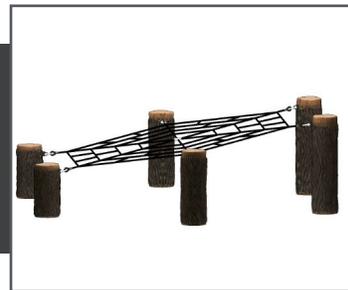


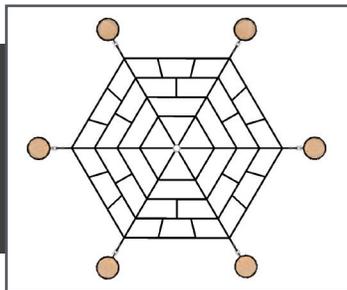

Our giant Spider Web Climber held up with Log Stumps allows kids to scale across the web like a giant insect. Crawl across the top or dangle from the bottom as you discover all the fun ways to play on this climber!

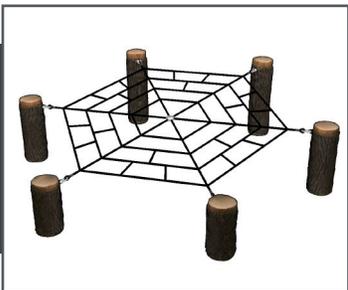

Spider Web Climber 1000090

L: 12'-0" x W: 10'-6" x H: 3'-3"
2,100 LBS


~ Dimensions and weights are approximate ~
~ Heights shown from top of surfacing ~
User Group Age: 5-12

All images and concepts are Copyright © 2016, Cre8Play, LLC-All rights reserved. Cre8Play may change or modify this information as necessary and without notice.

Revised 8/8/19

5121 Winnetka Ave N • Suite 108
New Hope, MN 55428
612.670.8195
info@cre8play.com
cre8play.com



Installation Instructions

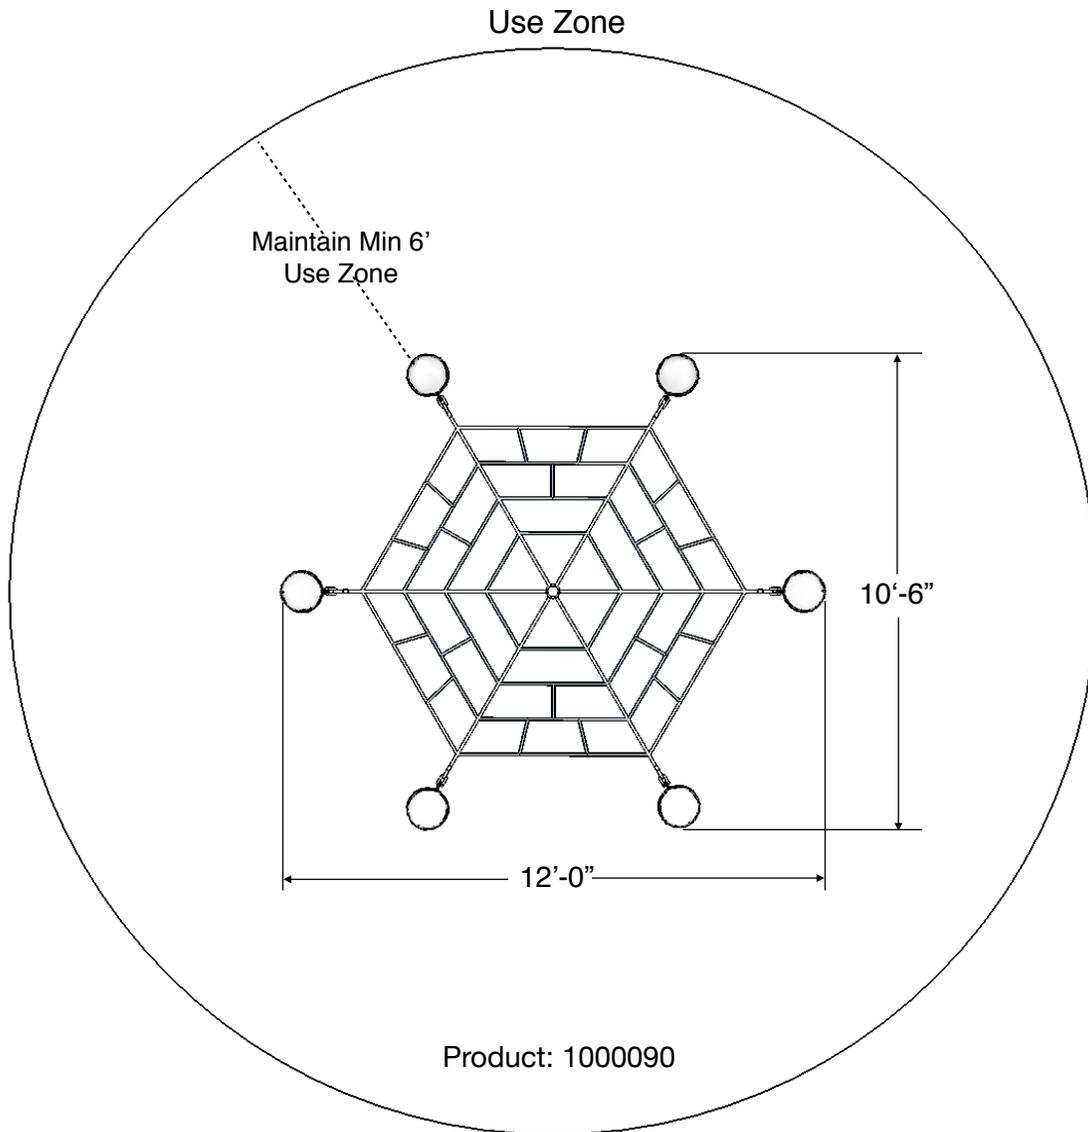


Included Items:

Item	Description	Quantity
Spider Web Climber	Play Equipment	1
D-shackle, Bushing and Spacers	Mounting Hardware	6 sets

Installation Instructions

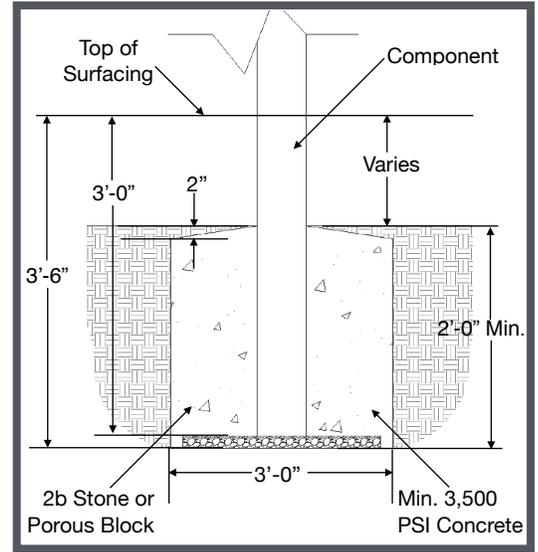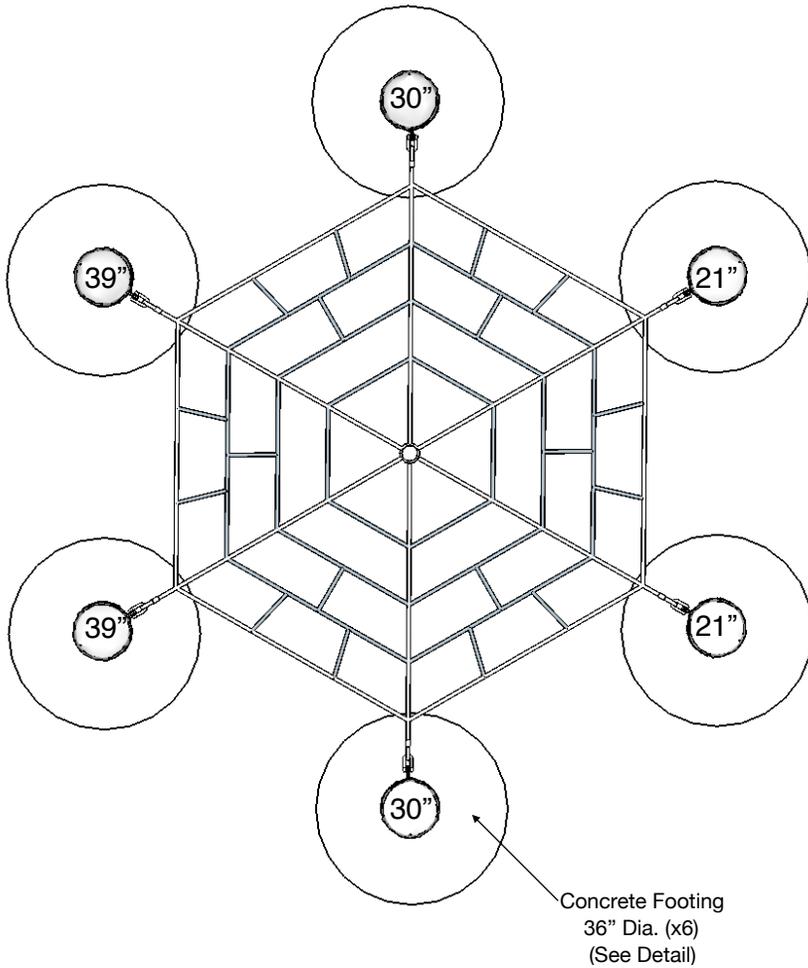

Typical Component Footing Detail
Check local soil conditions.
(Not to Scale)

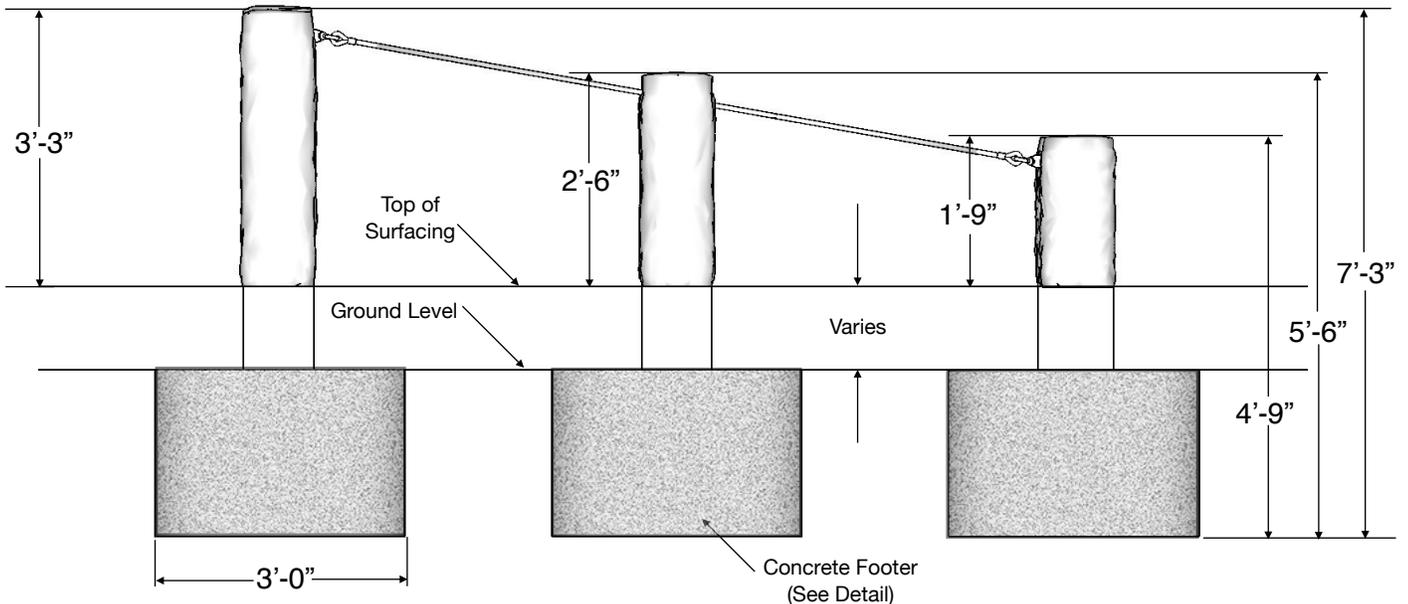

~ All dimensions are approximate ~

User Group Age: 5-12

Last Revised 8/8/19

5121 Winnetka Ave N • Suite 108


New Hope, MN 55428

612.670.8195

info@cre8play.com

cre8play.com

Installation Instructions

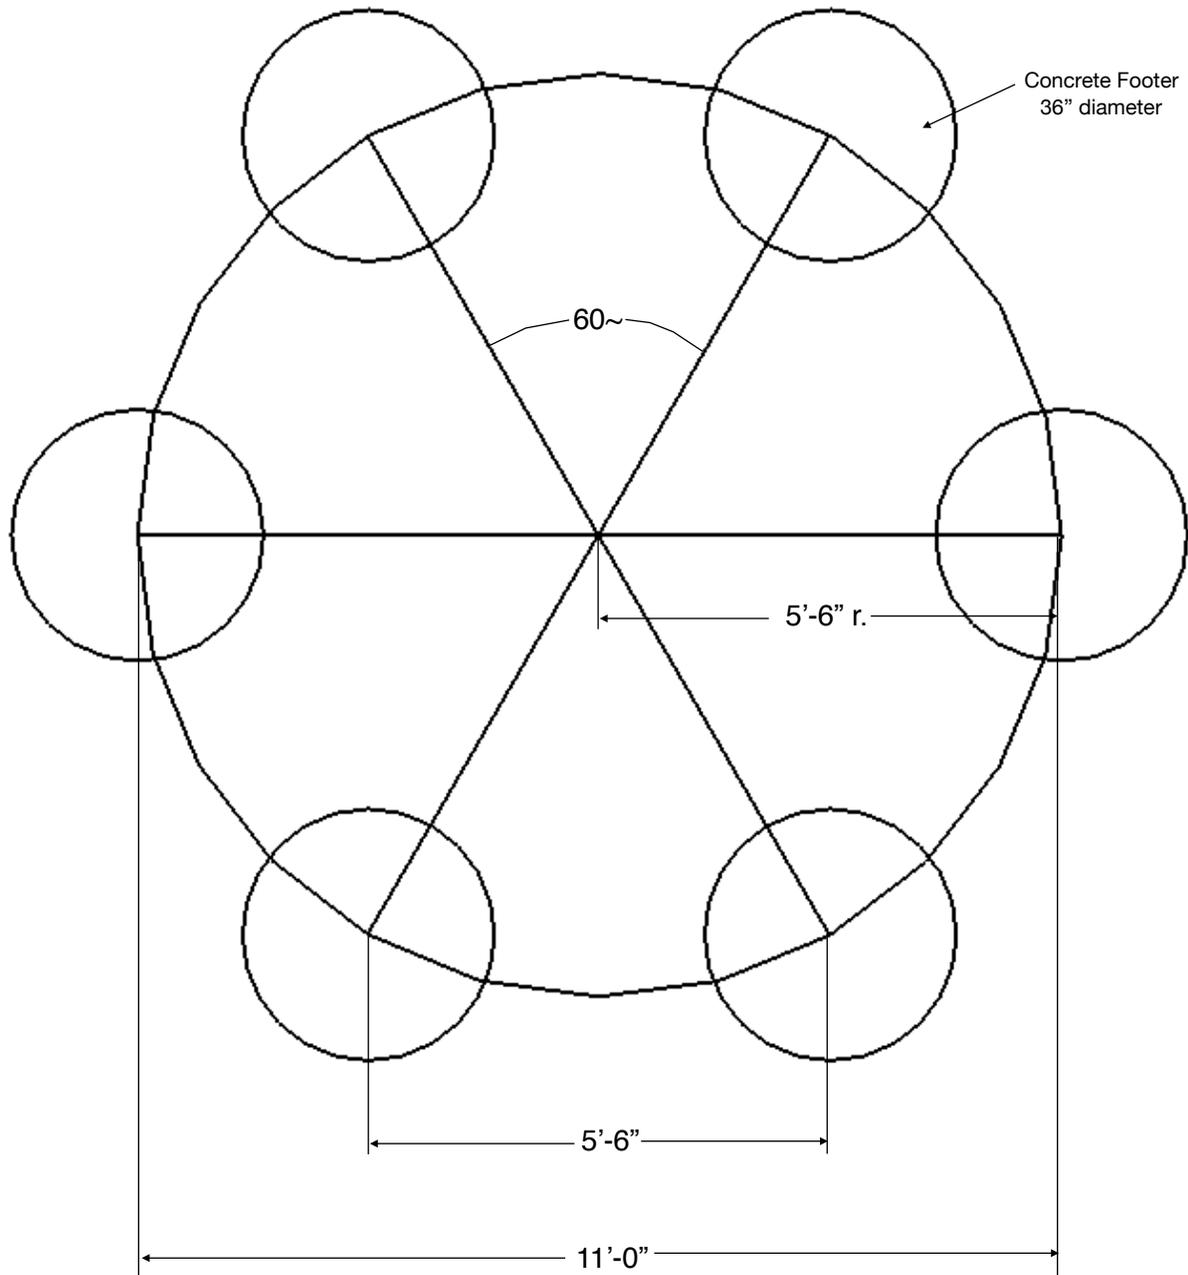

Footing layout plan

Installation Instructions


NOTE: Read installation instructions thoroughly before starting installation process.

Step 1: Lay out the area and prepare the site for install. Concrete must be installed over a solid, level base. Check local soil condition and local codes. See product installation instructions for minimum use zone requirements to ensure proper spacing and adequate surfacing area.

Step 2: Dig the footings for the Spider Web Climber. The concrete should be flush with the ground level. Allow time for the concrete to completely cure before continuing. Refer to the typical footing in these installation instructions.


Step 3: Using an appropriate lull-type forklift or boom, place the posts into the footing holes. Unfurl net climber and be sure that the net fits taut between the posts before final mounting. See the the mounting detail below for information on how to attach the net to the posts. Plumb the posts keeping the net taught. Temporarily brace the posts.

Step 4: Pour your concrete per footing detail. Allow time for the concrete to completely cure before removing temporary bracing. Refer to the surfacing manufacturer for installation of an approved impact attenuating play surface around the Spider Web Climber at a minimum of 6 feet in every direction.

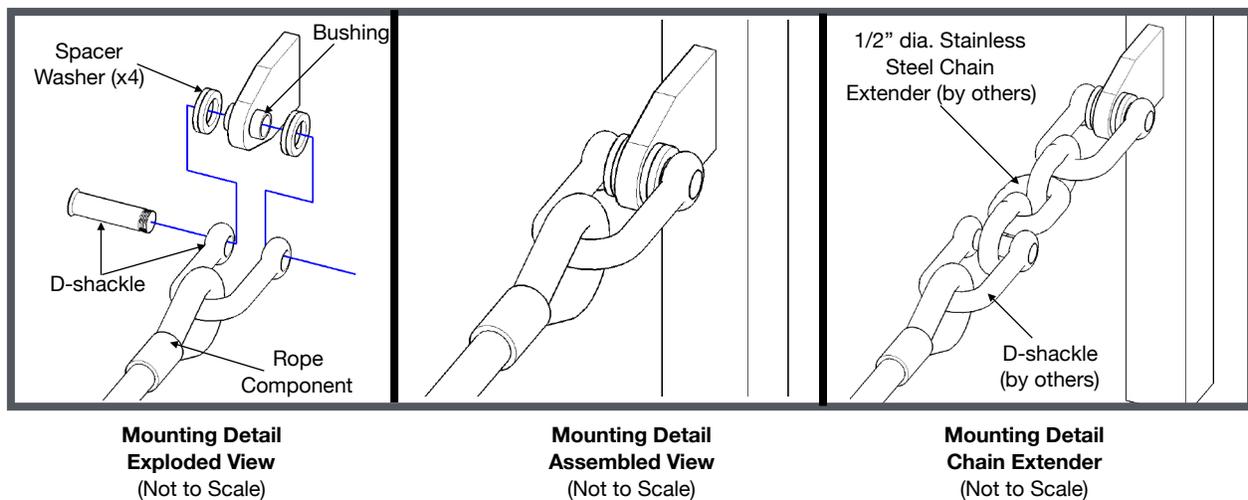

NOTES PRIOR TO CONSTRUCTION:

- Use appropriate equipment to lift and move the play equipment.
- Check local codes and requirements prior to digging or installing any equipment.

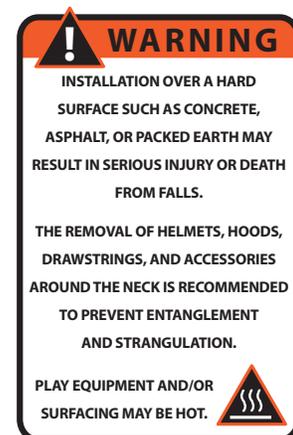

~ All dimensions are approximate ~

User Group Age: 5-12

Last Revised 8/8/19

5121 Winnetka Ave N • Suite 108

New Hope, MN 55428

612.670.8195

info@cre8play.com

cre8play.com