



Batter Batter, Sa-wingg Batter! Lil' sluggers get to climb on this 12' Baseball Glove Climber, you can even choose the optional tube slide. Integrated handholds and leather textured GFRC surface make this a one-of-a-kind sculpture.




Baseball Glove Climber
1000228
 L: 12'-2" x W: 7'-10" x H: 8'-7"
 3,860 LBS



Baseball Glove Climber w/Slide
1000229
 L: 12'-6" x W: 7'-10" x H: 8'-7"
 4,260 LBS

~ Dimensions and weights are approximate ~
~ Heights shown from top of surfacing ~
User Group Age: 5-12



Installation Instructions

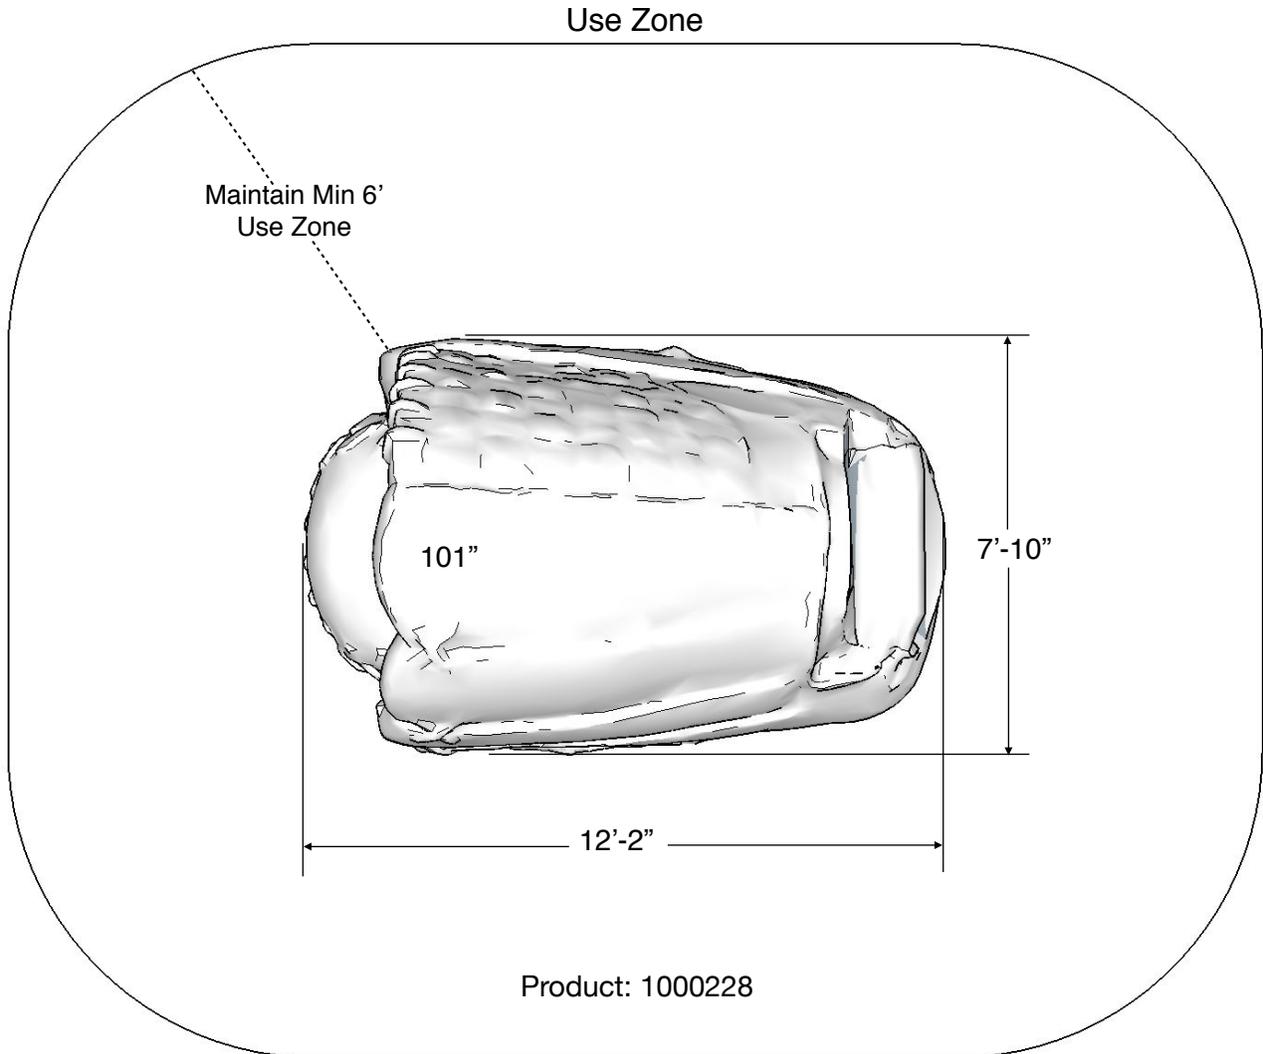

Included Items:

Item	Description	Quantity
Baseball Glove Climber	Play Equipment	1
Anchor Bolt 5/8" x 6"	Mounting Hardware	4

Installation Instructions

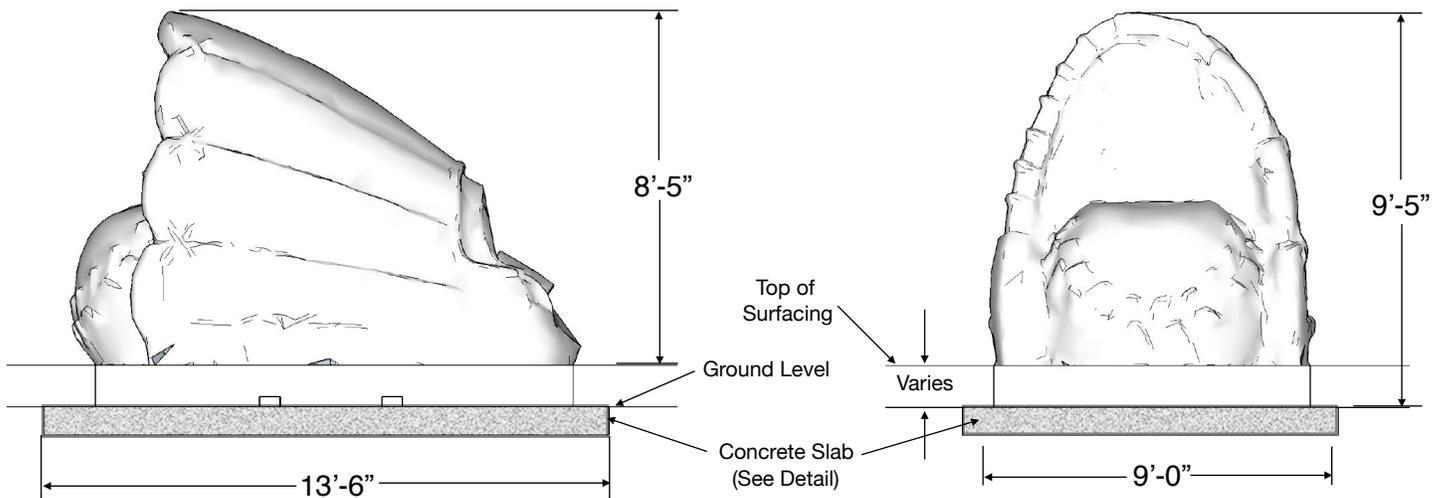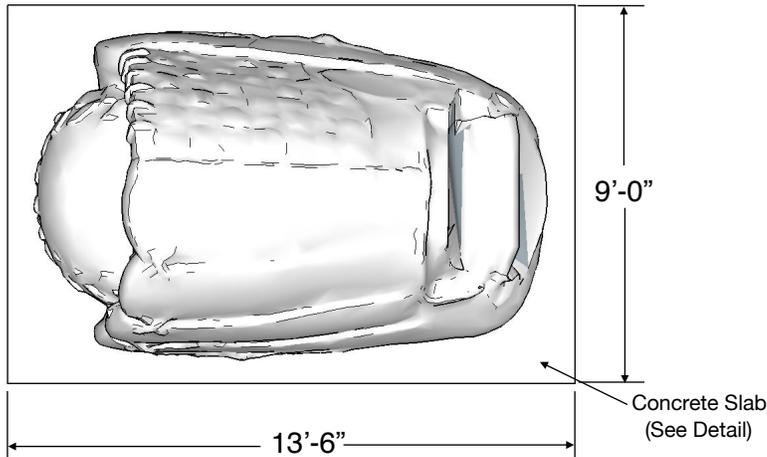

~ All dimensions are approximate ~

User Group Age: 5-12

Last Revised 8/9/19


Installation Instructions

NOTE: Read installation instructions thoroughly before starting installation process.

Step 1: Lay out the area and prepare the site for install. Concrete must be installed over a solid, level base. Check local soil condition and codes. See product installation instructions for minimum use zone requirements to ensure proper spacing and adequate surfacing area.

Step 2: Pour a concrete base for the Baseball Glove Climber. Refer to the typical slab section on this page. The concrete should be flush with the ground level. Allow time for the concrete to completely cure before continuing.


Step 3: Using an appropriate lull-type forklift or boom, place Baseball Glove Climber into final installation location. See the hardware recommendation page for information on anchoring equipment down to your slab. Refer to the surfacing manufacturer for installation of an approved impact attenuating play surface around the Baseball Glove Climber with a minimum of 6 feet in every direction.

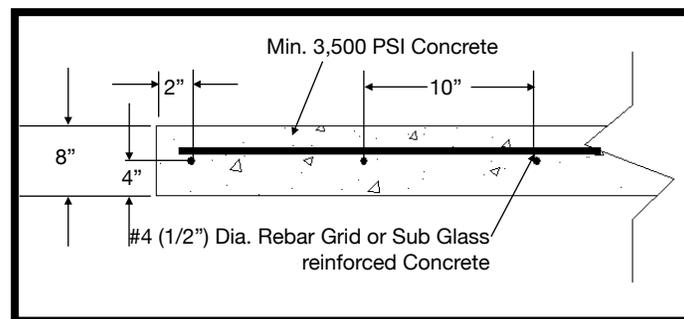

Typical 8" Concrete Slab Section
Check Local Soil Conditions
(Not to Scale)

NOTES PRIOR TO CONSTRUCTION:

- Use appropriate equipment to lift and move the play equipment.
- Check local codes and requirements prior to digging or installing any equipment.

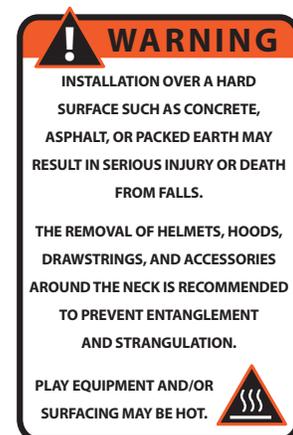

~ All dimensions are approximate ~

User Group Age: 5-12

Last Revised 8/9/19

5121 Winnetka Ave N • Suite 108

New Hope, MN 55428

612.670.8195

info@cre8play.com

cre8play.com

Installation Instructions


Step 4: Locate your anchor bolts, supplied by Cre8Play. Using the proper standard drill bit size noted in the installation table, drill the concrete to the appropriate hole depth (C).

Step 5: Insert the anchor bolt into the hole and tighten until the bolt is fully seated. Do NOT over tighten the anchor bolts.


Installation Table

Anchor Bolt Size	ANSI Standard Drill Bit Diameter	Anchor Head (Socket Size) Diameter Ⓐ	Minimum Embedment Ⓑ	Hole Depth Ⓒ
5/8" x 6"	1/2"	13/16"	5 1/2"	6 1/2"


Anchor Bolt (Large Diameter Tapcon) Installation:

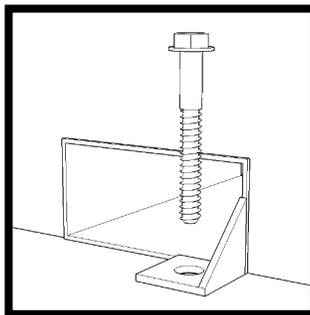


Mounting Detail
(Not to Scale)

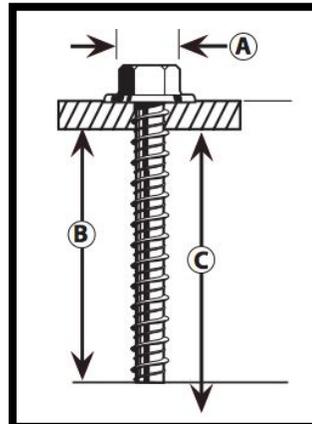

Step 1: Drill

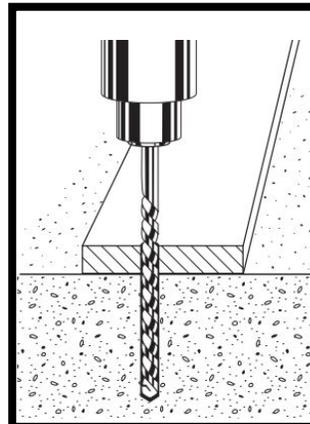

Step 2: Anchor

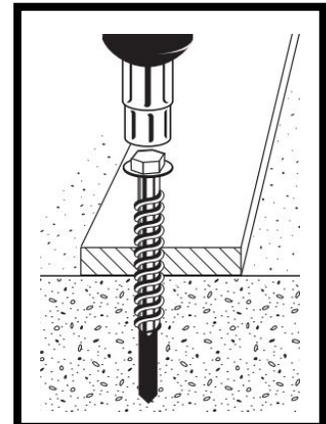

NOTE: Always wear eye protection appropriate to the task at hand.