



A fun themed climber with varying degrees of climbing difficulties. Constructed of durable Glass Fiber Reinforced Concrete (GFRC). The unique design allows for 360 degrees of climbing, integrated handholds, realistic texture.




**In-ground**

L: 3' 2"  
W: 3' 5"  
H: 3' 0"  
640 LBS


**Surface Mount**

L: 3' 2"  
W: 3' 5"  
H: 3' 0"  
550 LBS


## 1000350-Acorn Climber, Tipped

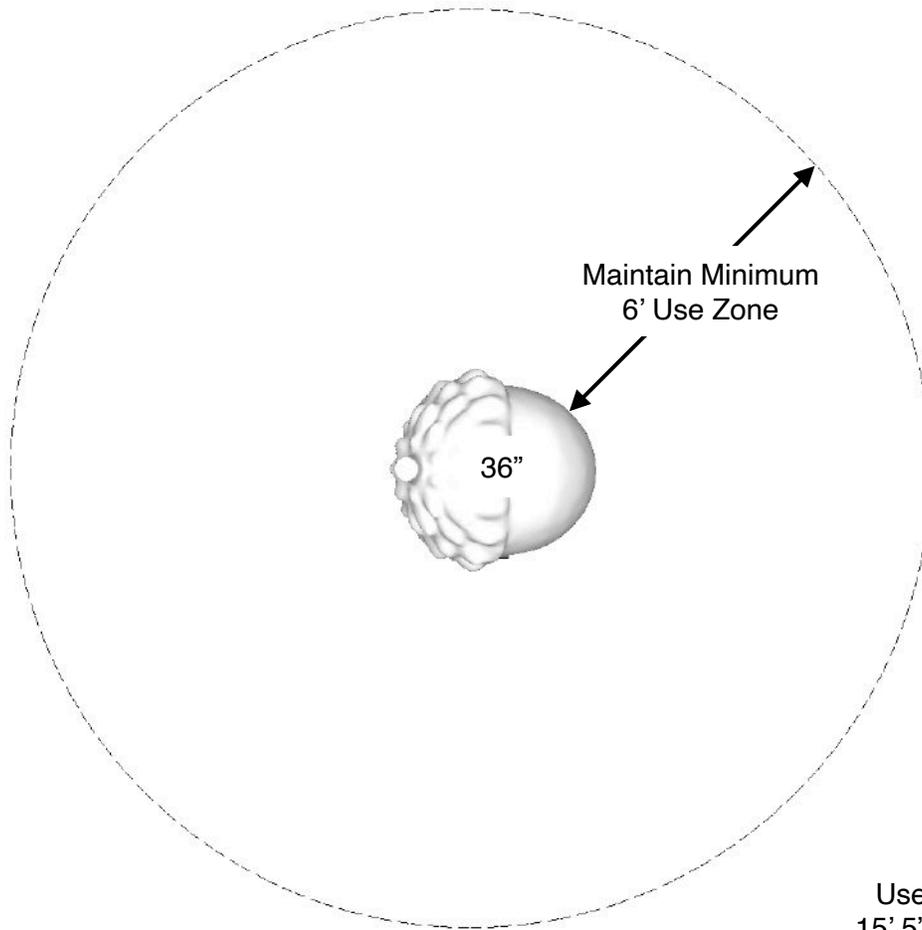

Use Zone:  
15' 5" x 15' 5"

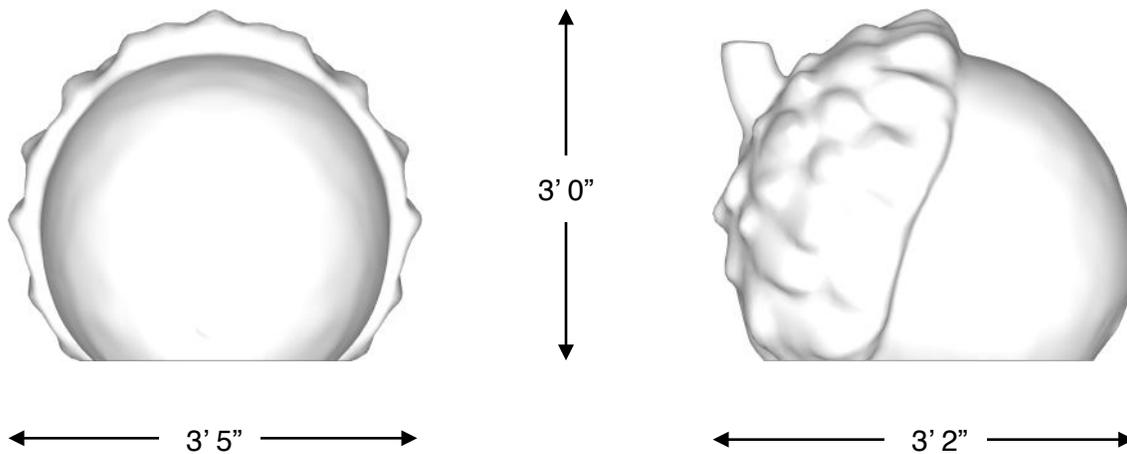

1000350-Acorn Climber, Tipped (Inground)

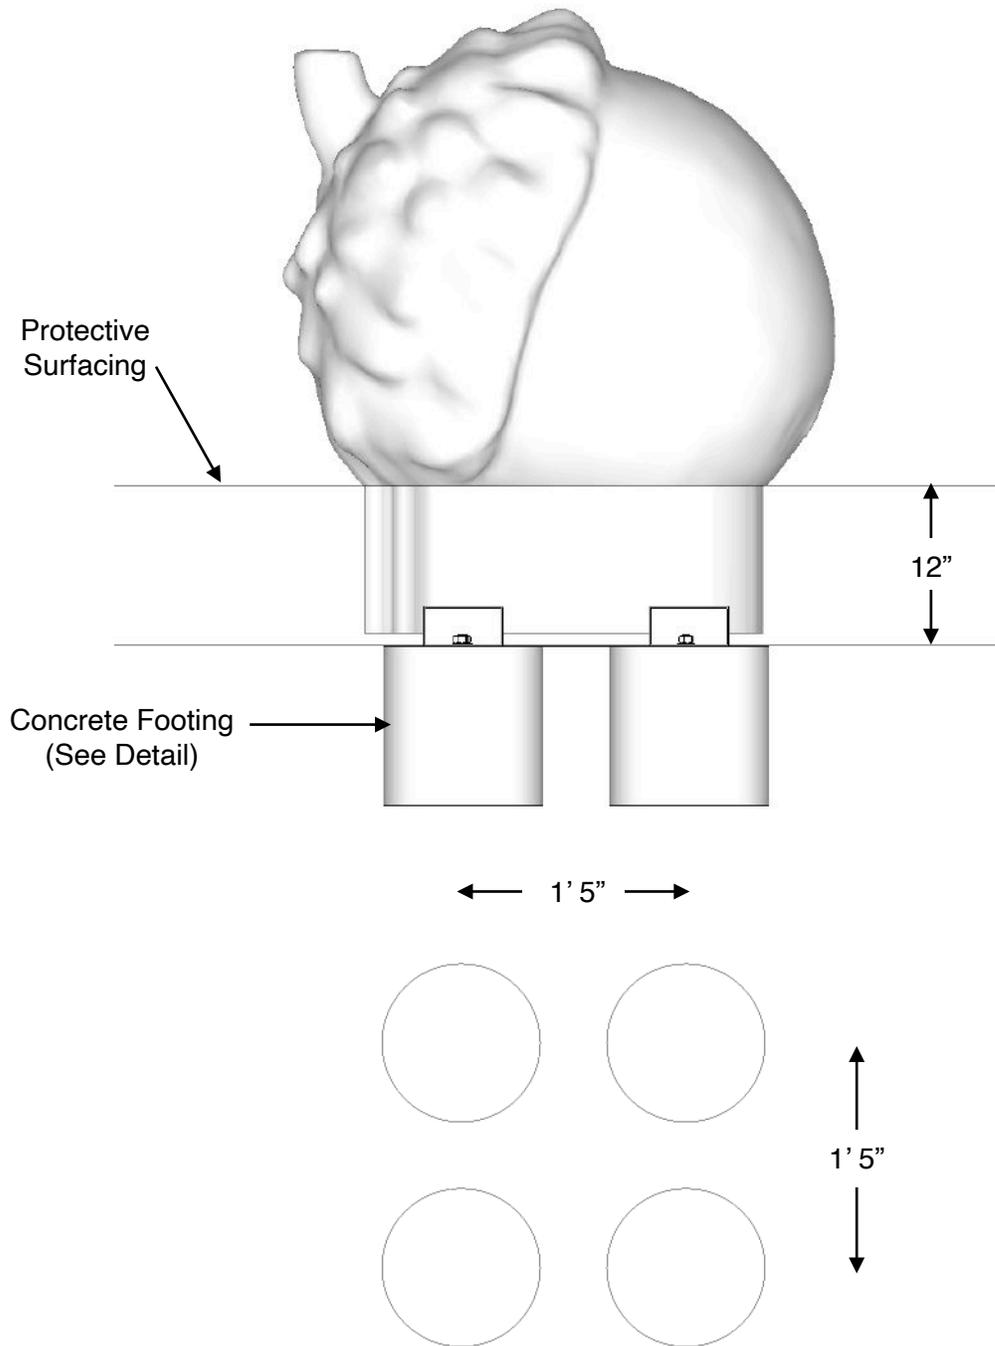

If you determine that less than 12" of surfacing is required, make sure the top of the concrete slab is 12" below the top of the protective surfacing.

## 1000350-Acorn Climber, Tipped (Inground)

**NOTE: Read installation instructions thoroughly before starting installation process.**

**Step 1:** Lay out the area and prepare the site for install. Concrete must be installed over a solid, level base. Check local soil condition and codes. See product installation instructions for minimum use zone requirements to ensure proper spacing and adequate surfacing area.


**Step 2:** Refer to the typical in-ground footing detail on excavating a hole for the Component.

**Step 3:** Place the component into the excavated footing, temporarily bracing when level and plumb. Install the L-Bolts onto the base plate found in Hardware kit HK127 (4 places). Pour the concrete footings. The concrete should be flush with the ground level, as shown in the typical in-ground footing detail. Allow time for the concrete to cure completely before continuing.

**Step 4:** Remove temporary bracing.

### Included Items:



Part #	Item	Description	Quantity
1000350	Acorn Climber-Tipped (Inground)	Play Equipment	1
HK127	HDW-53	L-Bolt 1/2" x 8", Galv.	4
HK127	HDW-54	1/2" Flat Washer, Galv.	8
HK127	HDW-55	1/2" Hex Nut, Galv.	8

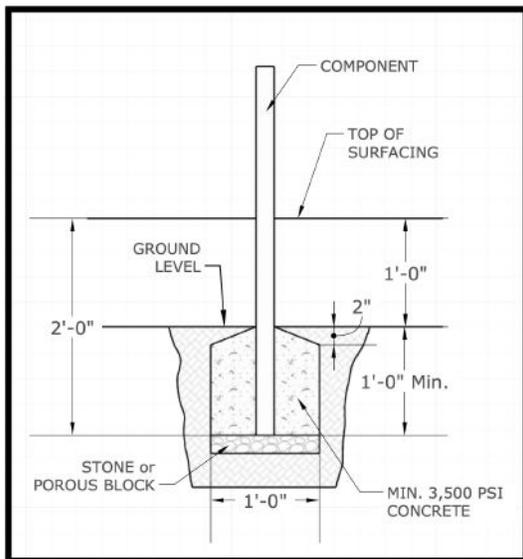

**Typical Component Footing Detail**  
Check local soil conditions.  
(Not to Scale)

### NOTES PRIOR TO CONSTRUCTION:


- Use appropriate equipment to lift and move the play equipment.
- Check local codes and requirements prior to digging or installing any equipment.

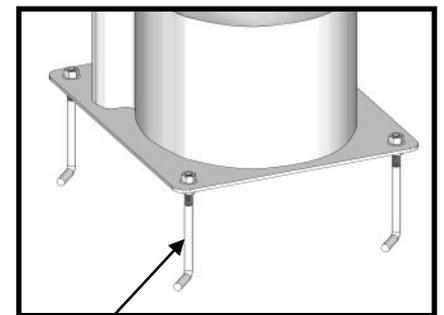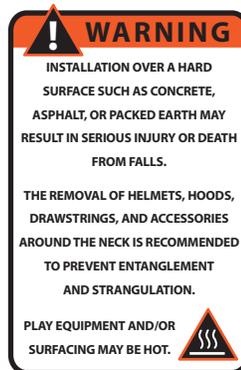

Hardware kit HK127  
L-Bolt, washers and nuts  
(Make threads flush with top of bolt)


**NOTE: Always wear eye protection appropriate to the task at hand.**

1000350S-Acorn Climber, Tipped (Surface Mount)

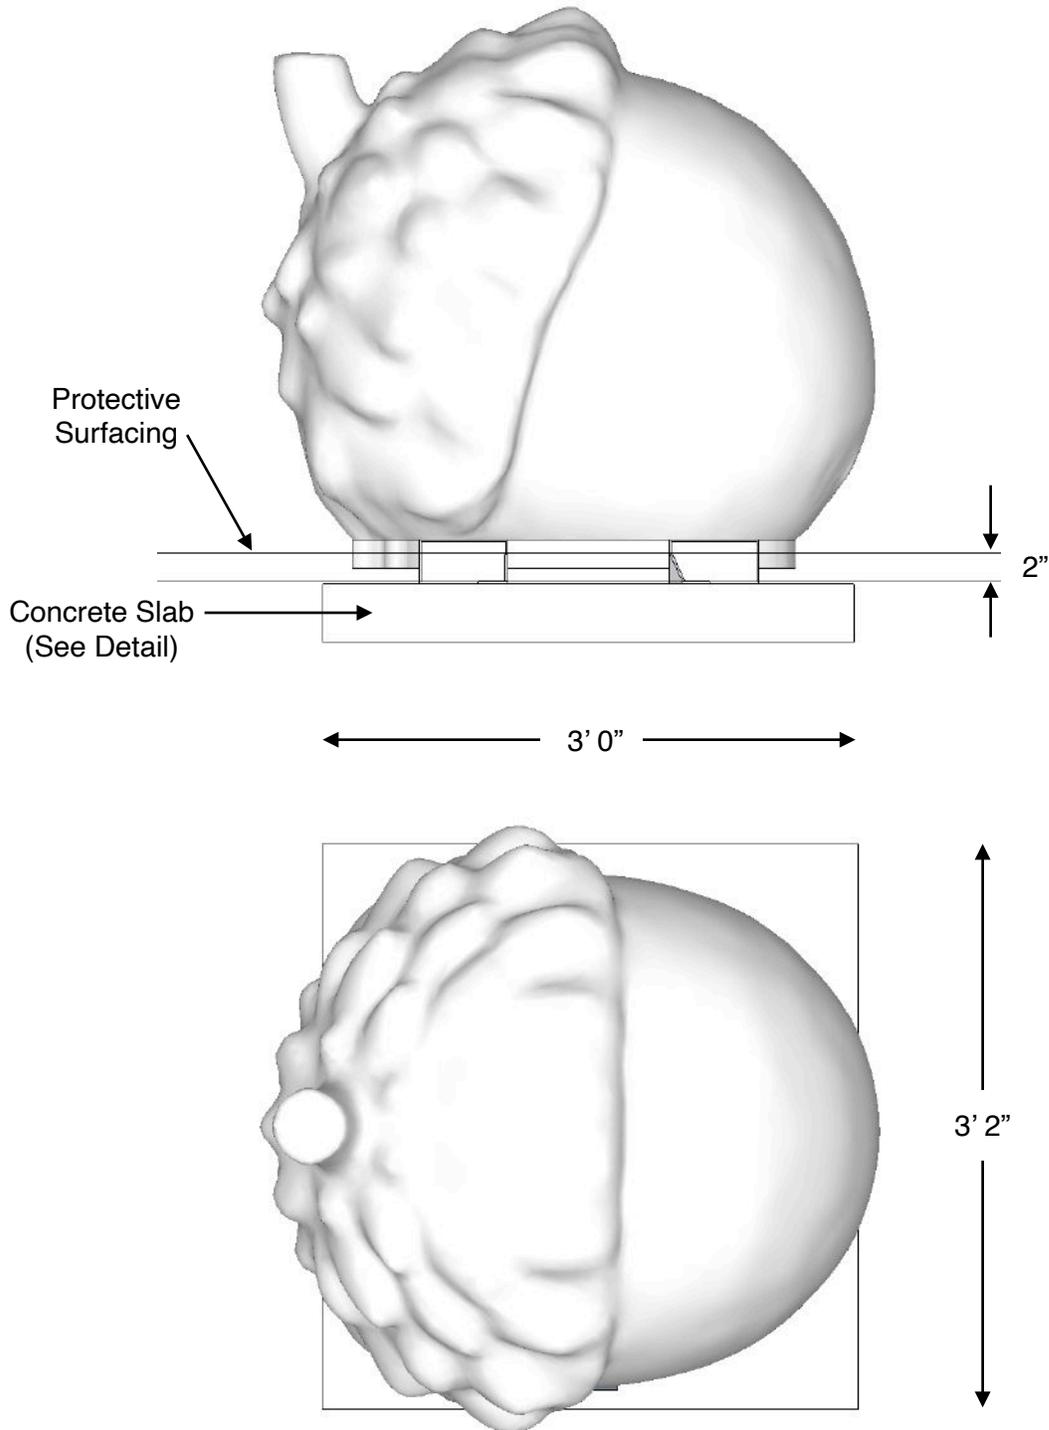

### NOTES PRIOR TO CONSTRUCTION:

- Use appropriate equipment to lift and move the play equipment.
- Check local codes and requirements prior to digging or installing any equipment.

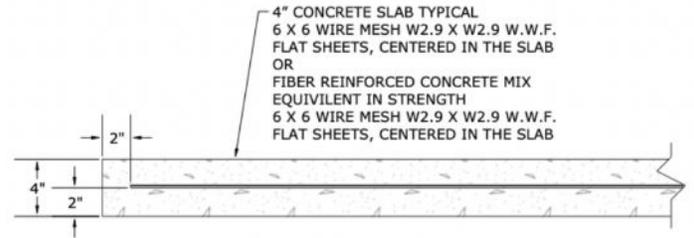


TYPICAL 4" CONCRETE SLAB DETAIL (NOT TO SCALE)  
 CHECK LOCAL SOIL CONDITIONS.



EXAMPLE OF COMPONENT



ANCHOR BOLT  
 SEE CHART

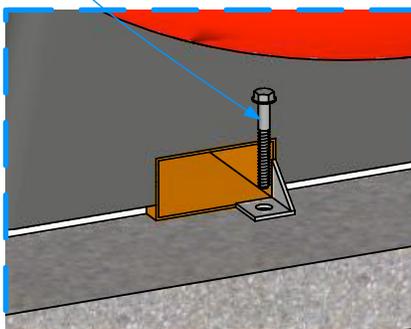

## 1000350S-Acorn Climber, Tipped (Surface Mount)

**NOTE: Read installation instructions thoroughly before starting installation process.**

**Step 1:** Lay out the area and prepare the site for install. Concrete must be installed over a solid, level base. Check local soil condition and codes. See product installation instructions for minimum use zone requirements to ensure proper spacing and adequate surfacing area.

**Step 2:** Pour a concrete base for the component. Refer to the typical concrete slab section in this document. The concrete should be flush with the ground level. Allow time for the concrete to completely cure before continuing.

**Step 3:** Using an appropriate forklift or boom, place component into final installation location. See the hardware recommendation for information on anchoring equipment down to your concrete slab. Refer to the surfacing manufacturer for installation of an approved impact attenuating play surface around the component with a minimum use zone in every direction.

**Step 4:** Locate your anchor bolts, supplied. Using the proper standard drill bit size noted in the installation table, drill the concrete to the appropriate hole depth through the mounting holes.

**Step 5:** Insert the anchor bolt into the hole and tighten until the bolt is fully seated. Do NOT over tighten the anchor bolts.


### Included Items:

Part #	Item	Description	Quantity
1000350S	Acorn Climber-Tipped (Surface Mount)	Play Equipment	1
HK128	HDW-16	Anchor Bolt 1/2" x 3"	4


### Anchor Bolt Installation:

Anchor Bolt Size	ANSI Standard Drill Bit Diameter	Anchor Head (Socket Size)	Minimum Embedment	Hole Depth
1/2" x 3"	7/16"	3/4"	2 1/2"	3 1/2"
5/8" x 4"	1/2"	13/16"	3 1/2"	4 1/2"
5/8" x 6"	1/2"	13/16"	5 1/2"	6 1/2"

**Step 1: Drill**

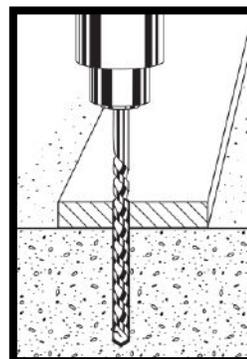

**Step 2: Anchor**

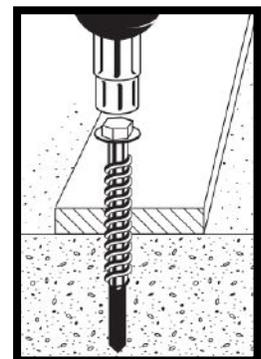

**NOTE: Always wear eye protection appropriate to the task at hand.**